

# TOASTER



INSTRUCTION MANUAL

Save these instructions  
For household use only

Model: KST075AU

Power:  
120V~ 60Hz 850W

# Table Of Contents

01

IMPORTANT SAFETY INSTRUCTIONS -----	02
LIST OF MAIN PARTS -----	04
TECHNICAL SPECIFICATIONS -----	05
CONTENTS OF PACKAGING -----	05
TOASTING TIME -----	06
OPERATING INSTRUCTIONS BEFORE FIRST USE -----	07
COOKING USE -----	07
DEFROST FUNCTION -----	08
REHEAT FUNCTION -----	08
BAGEL FUNCTION -----	08
CANCEL FUNCTION -----	09
CRUMB TRAY -----	09
CARE GUIDE -----	09
TO CLEAN -----	10
STORAGE -----	10
DISPOSAL INFORMATION -----	10
SAFETY PRECAUTION -----	10

# Important Safety Instructions

---


When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

1. **READ AND SAVE ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cords or plugs in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or after it has been damaged in any manner. Please contact the after-sales staff to take care of it for you.
7. The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
8. Do not use outdoors.
9. Do not let the cord touch hot surfaces or allow it to hang over the edge of a table or counter.
10. Do not place on or near a heated oven or a hot gas or electric burner.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to OFF, then remove the plug from the wall outlet.
13. Do not use appliance for any use other than its intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted into the toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toaster slots are covered or are touching flammable material, including curtains, draperies, and walls when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. The appliance is exclusive for the use which has been expressed by the manufacturer. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper, or irresponsible use or for repairs made to the product by unauthorized personnel.

18. After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
19. The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard. In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
20. Before inserting the plug into the electrical outlet, make certain that the voltage of the outlet corresponds to the value indicated on the information label that is attached to the appliance.
21. The use of an extension cord is not recommended, as overheating of the extension cord may occur during operation of the toaster
22. When the appliance is plugged into the electrical outlet or while it is turned on, never place hands in the bread toasting slots. Do not touch the appliance with wet or damp hands.
23. The metal sides of the toaster and the areas surrounding the bread slots become very hot during use. Operating the appliance should be carried out using only the plastic dials and handles.
24. Bread is a food which may catch fire. Do not use this appliance under or next to curtains or other combustible material.
25. Never re-toast the same piece of bread at the same setting. If you wish to re-toast the bread, set the toasting control dial to a lower setting and do not leave the toaster unattended. Failure to do so may result in a fire hazard.
26. Do not cover the appliance while it is in use.
27. Unplug the appliance from the electrical outlet when it is not in use.
28. Do not unplug the appliance from the outlet by pulling on the cord.
29. Do not leave the appliance exposed to the elements (rain, direct sunlight, frost, etc.).
30. Before doing any cleaning or operation, unplug the appliance from the electrical outlet.
31. Do not immerse the appliance, the plug, or the electrical cord in water.

## **SAVE THESE INSTRUCTION**

# List Of Main Parts

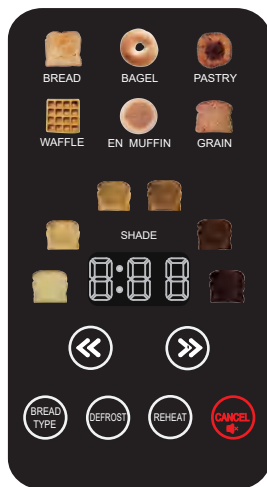

ITEM	ICON	OPERATION INSTRUCTION
	1	Bread Type Button
	2	Defrost Button (Toast Function)
	3	Browning Time Decrease Button
	4	Browning Time Increase Button
	5	Reheat Button (Toast Function)
	6	Cancel Button / Mute Mode Button
	7	Browning Setting & Countdown Timer
	8	Browning Color Setting (1-6)
	9	Menu Function Setting Area
	10	Loading Lever
	11	Crumb Tray

# Technical Specifications

---

<b>Model Number</b>	KST075GU
<b>Rating Voltage</b>	120V~ 60Hz
<b>Nominal power</b>	850W

## Contents Of Packaging

---

- 1.TOASTER
- 2.INSTRUCTION MANUAL

## Toasting Time

---



THIS PRODUCT IS DESIGNED TO BAKE TWO SLICES OF BREAD AT THE SAME TIME, IF YOU ONLY BAKE A PIECE OF BREAD, PLEASE USE FIRST LEVEL TO AVOID BURNED.

<b>TOAST TIME ±10S BREAD TYPE</b>	<b>SETTING 1 (S)</b>	<b>SETTING 2 (S)</b>	<b>SETTING 3 (S)</b>	<b>SETTING 4 (S)</b>	<b>SETTING 5 (S)</b>	<b>SETTING 6 (S)</b>
BREAD	70	120	150	180	210	230
BREAD + DEFROST	84	144	180	216	252	276
BREAD + REHEAT	30	30	30	30	30	30
BAGEL	100	140	180	220	260	300
BAGEL + DEFROST	120	168	216	264	312	360
BAGEL + REHEAT	30	30	30	30	30	30
PASTRY	65	85	105	125	145	170
PASTRY + DEFROST	78	102	126	150	174	204
PASTRY + REHEAT	30	30	30	30	30	30
GRAIN	70	95	120	145	170	195
GRAIN + DEFROST	84	114	144	174	204	234
GRAIN + REHEAT	30	30	30	30	30	30
EN MUFFIN	100	135	170	205	240	280
EN MUFFIN + DEFROST	120	162	204	246	288	336
EN MUFFIN + REHEAT	30	30	30	30	30	30
WAFFLE	70	95	120	160	185	210
WAFFLE + DEFROST	84	114	144	192	222	252
WAFFLE + REHEAT	30	30	30	30	30	30

# Operating Instructions

## Before First Use



---

- 1.Remove all the packaging and safely discard.
- 2.Insert the plug into a power outlet.
- 3.The LED display will light up and the appliance will enter its standby default setting.
  - **NOTE: STANDBY DEFAULT SETTING WILL ILLUMINATE A FLASHING LIGHT ON TOASTER SETTING “SHADE” AND MENU FUNCTIONS SETTING AREA.**
- 4.Pressing the lever down fully to cure the new elements.
- 5.The LED display will emit a solid light on the selected Menu, setting lights will flash repeatedly from the first till the selected one and Browning Time functions and begin the countdown with the timer.
- 6.In doing so, This will burn off any lubricants from the Artisan Toasty Slice heating elements and may omit a smell, this is normal.
- 7.The lever will pop up automatically once the timer has finished.

## Cooking Use

---

**THE MENU FUNCTION IS DESIGNED TO TOAST, DEFROST OR REHEAT (IN CONJUNCTION WITH THE TOAST FUNCTION SETTING SELECTION) VARIOUS BREAD TYPES. SOME BREAD TYPES REQUIRE MORE OR LESS TOASTING TIME DUE TO MANY FACTORS SUCH AS SUGAR CONTENT AND DENSITY. SELECT YOUR BREAD TYPE FOR RECOMMENDED BROWNING TIME FOR ULTIMATE RESULTS. THE SELECTED BREAD WILL FLASH DURING THE SELECTION PROCESS AND BE LIT SOLID DURING TOASTING ON THE LED DISPLAY.**

- 1.Press the “BREAD TYPE” button until the LED Display emits a flashing light on your desired bread type. Bread type settings include: BREAD, BAGEL, PASTRY, WAFFLE, EN MUFFIN (English Muffin), GRAIN.
- 2.Select desired Toast and Browning Time.To adjust the recommended browning time, use the decrease  or  increase buttons to adjust to the desired browning time.
- 3.Press the lever down fully.
- 4.The LED display will show your selected Function, Menu and Browning Time settings and begin the countdown with the timer.
- 5.The toast will raise automatically once the timer has finished.



# DEFROST Function

---

**THE DEFROST FUNCTION GENERATES 20% LONGER BROWNING TIME CYCLE PERFECT FOR TOASTING FROZEN BREAD TYPES.**

1. Press the “DEFROST” button repeatedly until the LED display emits a flashing light on 'DEFROST'.
2. Select the bread type in the “BREAD TYPE” setting.
3. A recommended browning time for the frozen bread type selected in the Menu setting will be suggested.
4. Press the lever down fully.
5. The LED display will show your selected Function, Menu and Browning Time settings and begin the countdown with the timer.
6. The toast will raise automatically once the timer has finished.

# REHEAT Function

---

**THE REHEAT FUNCTION IS DESIGNED TO REHEAT BREAD TYPES AFTER THE TOASTING CYCLE HAS FINISHED. THE REHEAT FUNCTION GIVES 30 SECONDS TOASTING TIME FOR A BURST OF HEAT.**

1. Press the “REHEAT” button repeatedly until the LED display emits a flashing light on 'REHEAT'.
  - **NOTE: SHADE SCREEN WILL DISPLAY WORDS OF “REH” AFTER SELECTION. IN THIS FUNCTION, THE BREAD TYPE AND BROWNING TIME SETTINGS CANNOT BE SELECTED.**
2. Press the lever down fully.
3. The toast will raise automatically once the timer has finished.

# BAGEL Function

---

**THE BAGEL FUNCTION IS DESIGNED TO TOAST THE BREAD BY ONE SIDE OF THE BREAD ONLY. ONLY THE TOASTER'S OUTER HEATING COILS ARE ACTIVATED, THE INNER COILS REMAIN COLD.**

1. Press the “BREAD TYPE” button until the LED Display emits a flashing light on 'BAGEL'.
2. Select desired Toast Function and Browning Time.
3. Press the lever down fully.
4. The LED display will show your selected Function, Menu and Browning Time settings and begin the countdown with the timer.
5. The toast will raise automatically once the timer has finished.

## **Cancel Function**

---

**TO STOP TOASTING AT ANY TIME DURING THE BROWNING PROCESS, PRESS THE “CANCEL” BUTTON.**

### **Mute Mode Function**

**TO ACTIVATE OR TO CANCEL THE MUTE MODE, LONG PRESS THE “CANCEL” BUTTON FOR 2 SECONDS UNTIL TWO SOUNDS ALERT.**

- **NOTE: ALL THE SOUND ALERT WOULD BE CANCELED AFTER ACTIVATING THE MUTE MODE**

## **Crumb Tray**

---

**THE CRUMB TRAY SHOULD BE EMPTIED REGULARLY AS A BUILD-UP OF CRUMBS COULD BE A POTENTIAL FIRE HAZARD. AFTER TOASTING, LET THE TOASTER COOL DOWN THOROUGHLY, THEN SLIDE OUT THE CRUMB TRAY AND EMPTY.**

## **Care Guide**

---

- **ALWAYS SWITCH OFF, UNPLUG FROM THE POWER OUTLET, AND DISMANTLE BEFORE CLEANING.**
- **NEVER PUT THE APPLIANCE, PLUG OR CORD IN THE WATER OR LET THE CORD OR PLUG GET WET.**
- **DO NOT WASH PARTS IN THE DISHWASHER.**
- **DO NOT CLEAN WITH SCOURING POWDERS, STEEL WOOL PADS OR OTHER ABRASIVE MATERIALS.**

## To Clean

---

**BEFORE CLEANING, SWITCH OFF THE POWER AT THE POWER OUTLET AND UNPLUG THE ARTISAN TOASTY SLICE AND LET THE APPLIANCE COOL DOWN. WIPE OUTER SURFACES WITH A DAMP CLOTH AND DRY. REMOVE AND EMPTY THE CRUMP TRAY REGULARLY AFTER USE. WIPE WITH DAMP CLOTH, DRY, THEN REPLACE IT IN THE TOASTER.**

## Storage

---

**ONCE CLEAN, STORE THE APPLIANCE IN A DRY CUPBOARD.**

## Disposal Information

---



**ELECTRICAL WASTE PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.**

## Safety Precaution

---

**DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE. THIS APPLIANCE IS INTENDED FORHOUSEHOLD USE.USE ON ALTERNATING CURRENT (120V~ 60Hz) ONLY.**

